

**KOCASO®**

**DISCOVER**

# **USER MANUAL**

## **Welcome**

Thanks for purchasing product KOCASO Discover. Please read this instruction manual carefully before use.

## **Packing List**

Upon opening the package, please check for the following items:

- 1×Feature Phone
- 1×Earbuds
- 1×USB Cable
- 1×Power Adapter
- 1×Screen Protector
- 1×User Manual

## **Specifications**

SIM: Dual SIM

Technology: GSM 850, 900, 1800, 1900MHz

Display: 2.8 inch QVGA, 320\*240

Camera: 0.3MP

Memory: 32MB RAM/64MB ROM (TF card up to 32GB)

Battery: 1800mAh

## **Safety Precautions**

- When driving, please do not make or answer calls. If making/answering calls cannot be avoided, please use the freehand function and put your phone in a mobile phone holder.
- Interference caused by mobile phones can affect flight safety, so please turn off your mobile phone when you are on a flight.
- Please turn off your phone when you are in

blasting area.

- Please turn off your phone when you are at gas stations or close to fuel/chemical reagents.

- Please do not disassemble. Only use accessories approved by the manufacturer.

- Please keep your phone away from extreme heat, cold, or wetness.

## **Special Key**

[Left Navigation Key]: The Shortcuts for the default Profiles.

[Right Navigation Key]: The Shortcuts for the default Write message.

[Up Navigation Key]: The Shortcuts for the default Camera.

[Down Navigation Key]: The Shortcuts for the default Phonebook.

[Middle Key]: The Shortcuts for the default Menu.

[Long press on \* Key]: Switch among \*,+,P and W.

[Long press on # Key]: Switch profiles between Meeting and General modes.

[Long press on 0 Key]: Turn torch on/off.

Note: "Press" in this manual, means to press and release the key; "Long Press/Press and hold" means to press and hold the key for at least 2 seconds.

## **1. Phonebook**

The mobile phone can store up to 2000 telephone numbers.

## **2. Call History**

Missed Calls/Dialed Calls/ Received Calls/ All calls/Delete call logs.

### **3. Messaging**

You can send and receive text messages and multimedia messages. If the short message memory is full, a blinking message icon appears on the top of the screen. While entering the messaging interface, you will see the following menu options: Write message, Inbox, Drafts, Outbox, Sent Messages, Templates, Message settings, Schedule message.

### **4. Profiles**

The mobile phone provides multiple user profiles including General, Silent, Meeting, Outdoor and Earphone.

You can customize settings on profiles and then activate corresponding profiles.

### **5. Audio Player**

Use this function to play audio files. In audio player interface, you can press \* key or # key to adjust volume.

### **6. Services**

Internet service: It includes the following submenus, Homepage

### **7. Camera**

Use this function to take photos.

### **8. Organizer**

#### *8.1 BT Dialer*

After successfully linking a smart phone, use the smart phone to call.

#### *8.2 File Manager*

The phone supports a memory card. You can use the file manager to conveniently manage various directories and files on the memory card.

### *8.3 Calendar*

A monthly-view calendar.

### *8.4 World Clock*

A basic world clock.

### *8.5 SIM Toolkit*

It offers various kinds of entertainment and applications by different operators.

## **9. Settings**

### *9.1 Phone Settings*

- Time and date: Set the home city, Set time/date, Set format, turn on/off time zone updating.

- Schedule to power on/off: you can set the timer to turn on/off.

- Language: Set the displaying language of the mobile phone menus.

- Preference Input method: Select one of the input methods as the default. So while you write SMS, it will automatically display the selected input method by default.

- Display Settings: Access to set wallpaper /show date and time.

- Shortcuts: Add/Edit/Delete the shortcuts, or change their order.

- Dedicated keys: Customize the shortcut functions of the Up, Left, and Right direction keys. In the standby interface, you can press a direction

key to directly enter the function menu corresponding to that direction key.

- Auto Update Time: Enabling this function will allow automatic time updates.

- Misc Settings: You can set the LCD backlight brightness and display time.

## 9.2 Dual SIM Settings

Choose one of them: Dual SIM open, Only SIM1 open, Only SIM2 open.

## 9.3 Network Settings

You can search the network again. Select your favorite network and choose to register the network automatically or manually. You can also choose GPRS transfer preference (Data or Call).

## 9.4 Security Settings

This function provides you with related settings about safety use.

- SIM Security

IN lock: The PIN (Personal identification number, 4 to 8 digit) code prevents your SIM card from being used by unauthorized people.

Change PIN: In general, the PIN is supplied with the SIM card from the network operator. If PIN check is enabled, you need to input the PIN each time when you power on your mobile phone. The SIM card will be locked if you input the wrong PIN code three times.

- Phone Security: Set the phone lock, the password is **1234** by default.

- Privacy Protection: This phone has a good privacy lock. The password is 1234 by default. You can manage the Phonebook, Messaging, Call history,

Image viewer, Video player,  
File manager, Keypad lock, and Audio  
player.

- Screen Auto Lock: You can set the automatic screen lock time.

- Mobile Tracker: After inserting a new SIM card and enabling this function, a message will be sent to the setting number after a period of time.

- Peer Control: Enter into the submenu: Peer control setting, Peer control item, Change password and Help.

### *9.5 Connectivity*

- BT: You can transfer files via BT when connected with other devices and listen to music, watch videos, and call via BT earphone.

### *9.6 Call Settings*

- SIM Call Settings

Call waiting/ Call divert/ Call barring and Line switching.

You can browse a list of above.

- Advanced Settings

Through this function, you can set Blacklist, Auto redial, Call time reminder, Reject by SMS, Connect notice, and Answer mode.

### *9.7 Restore Settings*

Use functions to restore factory settings. The initial password is **1234**.

## **10. Multimedia**

- Mobile TV

You can search and watch TV.

- Image Viewer

You can view pictures or images through this function.

- Video Recorder

You can record videos through this function.

- Video Player

Use this function to play video files.

- Sound Recorder

Use this function to record audio files. The phone supports AMR format.

## **Calculator**

This calculator provides limited precision and is applicable to simple arithmetic calculation.

## **Alarm**

Five alarm clocks are set but deactivated by default. Each alarm clock can be set with a ringing alert.

## **Auto Call Record**

You can record calls.

## **Torch**

You can turn on/off torch.

## **FM Radio**

You can use the application as a traditional FM radio with automatic tuning and saved channels. \* key or # key to tune volume. While listening to radio, you can dial or receive a call normally. During call conversation, the radio will turn mute automatically. If some applications are using GPRS or CSD to send or receive data, they may interfere with the radio.

When the FM radio is activated, the mobile phone will display the number and name (if it's been saved) and frequency of the radio channel.

### Option menu:

- Channel List: You can edit and save 30 channels.

- Manual Input: You can edit the specified radio frequency band.

- Auto Search: You can search automatically and save the searched channels into the list.

- Settings: You can set the Background play, Audio quality, and Record storage.

- Record: You can record new files.

- File list: The recorded files.

