



French Easel

SKU# SKY1346



ASSEMBLY MANUAL

Revised May 2014



1 Take the unit out of the box and place on a high flat surface.



2 Unlock both latches.



3 Loosen the round screws on the arms and open the unit. Tighten the round screws so that the unit does not close.




4 Once open, remove the trays from the inside. Locate one of the legs on the side of the unit.




5 Unclip the leg by pulling away from the easel.




6 Loosen the wing nut and rotate the leg down, until it fits into the groove. Tighten the wing nut and repeat this procedure on the opposite leg.

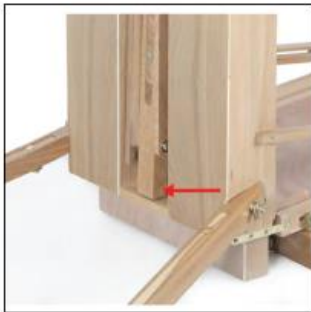


7 Locate the back leg and unclip it from the bottom by pulling away from the easel.

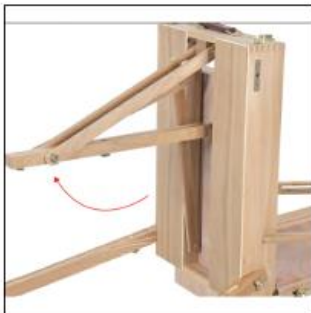

8 Rotate the leg around until its facing the right direction.

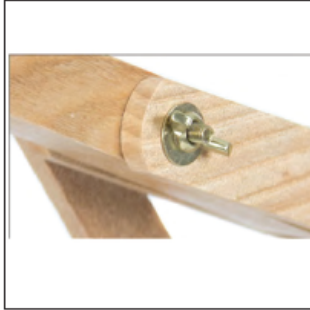

9 Tighten the wing nut to hold the leg in place.

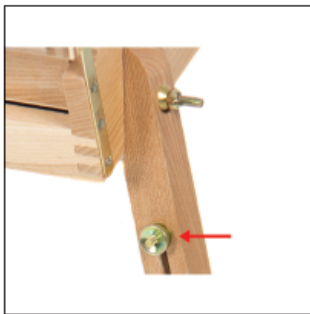

10 Once all three legs are out, adjust them to your liking by loosening the round screw shown in the image below.

WARNING:

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.